



JUMP STARTER


66

QUICK START GUIDE

Model No. 66



GETTING TO KNOW WEEGO 66

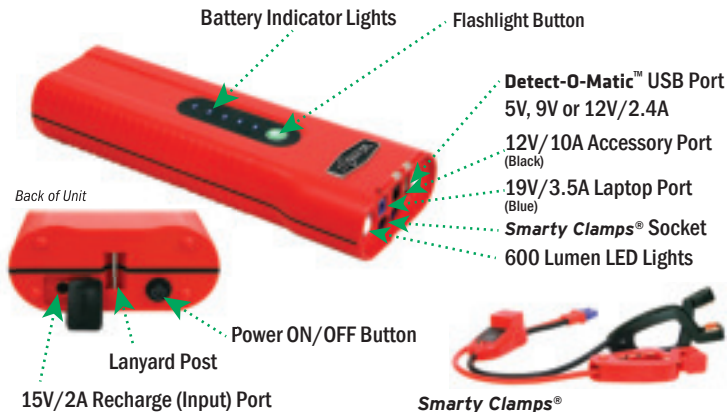


CHARGE UP YOUR WEEGO 66

When you unpack your new Weego 66 for the first time, charge it up to 100% with either the wall or car charger provided. Remember to recharge your Weego 66 every 6 months, even when you're not using it - it will help extend its lifespan.

POWERING ON/OFF

There's a Power ON/OFF Button on the back of your Weego 66. While powered "ON", the blue power button will remain illuminated. **Make sure you turn OFF your Weego 66 after every use; leaving it on slowly drains the battery.**

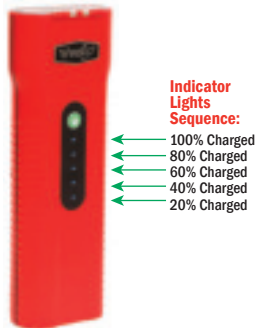

It takes 3 hrs. to fully charge. The indicator lights will flash one by one while the unit is charging. A solid light indicates a completed level of charge.

JUMP STARTING

BEFORE YOU JUMP

- ➔ Read all instructions and safety information prior to using this product. Improper use of this product will void your warranty and may result in product damage, excess heat, toxic fumes, fire, and other unsafe conditions for which Weego is not responsible.
- ➔ Read vehicle owner's manual first: it may have specific cautions and instructions about jumping your engine.
- ➔ This product is for use on **12V Lead-Acid** batteries only! **DO NOT** use this product on any other voltage battery, such as 6V, 24V, etc. **DO NOT** use this product on lithium-ion batteries.
- ➔ Never jump an engine in an enclosed area.
- ➔ Put your vehicle in **PARK** and engage the emergency brake (boats and powersports' vehicles should be put in **NEUTRAL**).
- ➔ **TURN OFF ALL ELECTRONICS!** – air conditioner, radio, lights, etc.
- ➔ Remove any devices attached to your Weego 66.
- ➔ Never leave your Weego 66 connected to your engine's battery unless actively jumping.
- ➔ Always disconnect the **Smarty Clamps**[®] from your Weego 66 when not in use.

WEEGO CUSTOMER SUPPORT We are dedicated to providing the best possible service. To reach Weego Customer Support, visit myweego.com/support or email support@myweego.com.



Connect Clamps



Power ON



Attach Black (-), Then Red (+)



When You Have GREEN LIGHT On Your Smart Box, Start Your Engine



Once it Starts, Disconnect Clamps from Weego 66



Detach Clamps From Battery

JUMP STARTING YOUR ENGINE

1. Ensure your engine is completely OFF.
2. Securely connect the **Smarty Clamps**[®] to your Weego 66, then power ON.
3. Attach **BLACK** clamp to your battery's negative (-) terminal, then the **RED** clamp to your battery's positive (+) terminal. Adjust your **Smarty Clamps**[®] to achieve MAXIMUM contact with the terminals. Poor connections will prevent you from starting your engine! *Clear off any dirt or build-up with a wire brush or a dry towel before connecting your clamps.*
4. Place your Weego 66 in a secure location or suspend using the provided hook & lanyard so it won't fall. Check your **Smarty Clamps**[®] lights.
5. When you have a **GREEN READY** light, start your engine. *If the engine doesn't start, turn off your vehicle and check your **Smarty Clamps**[®] lights.*
6. After a successful start, quickly disconnect the **Smarty Clamps**[®] from your Weego 66.
7. Detach the **Smarty Clamps**[®] from the battery.
8. You're now good to go - be sure to run your engine for at least 15 minutes before shutting it off again so it has time to recharge your battery.

If you are having issues getting your engine started, see the **Troubleshooting** section in your quick start guide, owners manual or on myweego.com for further details and assistance.

WARNING!

Exposed Metal Jaws May Be HOT After Use!

UNDERSTANDING YOUR *Smarty Clamps*®

Your *Smarty Clamps*® have a “smart” box that will help guide you through a jump with both sight and sound. It will let you know when it is safe to jump or if there is an error.



● **READY** **Solid Green Light, No Sound**

Smarty Clamps® detect that you have a good connection and you are ready to jump.

●● **REVERSE +/-** **Flashing Green & Red Lights + Beeping**

You attached the *Smarty Clamps*® on the wrong terminals. Make sure the **BLACK** clamp is attached to the battery's **NEGATIVE (-)** terminal, and the **RED** clamp is attached to the battery's **POSITIVE (+)** terminal. If not attached properly, Weego 66 will not let you jump your engine.

●● **COOL DOWN** **Flashing Red Light + Beeping**
WAIT FOR ●

The Weego battery overheats after long cranks or excessive current draw. Detach the *Smarty Clamps*® from the battery and give the unit up to 3 minutes to cool down. Then, repeat steps 2-5 under *Jump Starting Your Engine*.

● **SEE BACK** **Solid Red Light, No Sound**

There's a voltage incompatibility. The battery is too weak to even start OR the system voltage of your vehicle is not compatible with your Weego 66 (**for 12V vehicles ONLY**).

● **SEE BACK** **Solid Red Light + Beeping**

There may be an engine incompatibility issue if the engine you're connecting to is demanding more power than the Weego is able to give (600A). Please see *Engine Compatibility* on page 13 to determine if your engine size falls within the scope of Weego 66.

○ **No Light**

Either you have a poor connection, or your battery is so dead (nearly 0 volts) that your Weego clamps cannot register a connection.

TROUBLESHOOTING

Visit www.myweego.com/support/ for FAQs and additional troubleshooting inquiries and details.

My unit won't power on/charge/charge past a few lights

If your unit won't power on, won't take a charge OR won't charge past a few lights then it's been overdischarged. This can happen if the unit is left ON, or if an engine pulled the Weego battery past a certain limit during a jump start.

Please reach out to support@myweego.com to let them know about this issue – we'll receive and test the overdischarged Weego, then determine if we can repair it or if it needs to be fully replaced.

The Weego won't jump start my vehicle

A few things can attribute to a failed jump start, which we listed below. For more detail please visit our troubleshooting page at www.myweego.com/support

- **Poor connection between the Weego clamps and vehicle battery:** *the better the connection, the more likely you are to have a successful jump*
- **Dirty battery terminals:** *build up prevents all the available power from reaching your battery*
- **Vehicle-specific compatibility issues:** *occasionally we come across a vehicle that has unique power demands that a smaller model cannot fulfill, even though it's within our recommended engine range. In addition, vehicles with heavier electronics can sometimes create issues when jumping with a Weego; we mostly see this in push-to-start vehicles.*
- **Cold temperatures:** *Freezing temperatures create a lot of resistance in an engine which means it can require up to 3.5X the usual amount of power to get started; for example, an engine that usually needs 200A could need up to 700A in the extreme cold. In addition, if your Weego was stored in the cold temps it will make it harder for the Weego to deliver its full power.*
- **Low-Charged Weego:** *it's always best to work with full power on your Weego if you can. Our jump starters perform better at 100% charge than they do at 20% charge, especially when jumping larger engines.*

USB CHARGING

Charge your phone, tablet and other portable devices with your Weego 66 using your own USB charging cord. Your Weego 66 comes equipped with **Detect-o-Matic™** USB Charging. This intelligent charger communicates with your device to detect and deliver the fastest-possible charge.



USB Charging Port

To charge your devices, plug your charging cord into your Weego 66 USB port and connect to your device. Power on your Weego 66 and start charging!

LIGHTING

Your Weego 66 comes with a 600 lumen LED flashlight. Power on your Weego 66, then briefly press and release the flashlight button to initiate the following sequences:

- 1st click: Normal
- 2nd click: Strobe
- 3rd click: SOS
- 4th click: OFF

You can also skip directly to the OFF position by holding down the flashlight button.



Flashlight Button

Your Weego 66 will give you **up to 15 hours of flashlight time** and **up to 30 hours of strobe & SOS light** on a full charge.